

Cellular & Honeycomb Shades

Restrictions:

Minimum Width: 15"

Minimum Height: 15"

Maximum Width: 95"

Maximum Height: 120"

Minimum Inside Mount Depth: 1 1/2"

Minimum Inside Mount Depth (fully recessed): 2 3/8"

Minimum Outside Mounting Surface: 2 1/4"

How To Measure Cellular Shades

- Use a metal measuring tape for the most accurate results.
- Round all measurements to the nearest 1/8 of an inch.

INSIDE MOUNT


1. Check Window Frame Depth

Measure the depth as shown. Inside mounts require a **minimum of 1 1/2" unobstructed depth** within your frame for most styles. Minimum Inside Mount Depth (fully recessed): 2 3/8" . If your window does not meet requirements, outside mount is recommended.



2. Check for Evenness


Measure the diagonals as shown. An uneven window will have measurements that will differ by 1/2". If this happens, an outside mount is recommended.

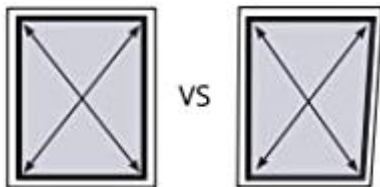

3. Measure Width and Height of Window Frame

W: Measure your window frame at 3 locations: top, center, and bottom. **Use the shortest** of your three measurements as the working width.

H: Measure your window frame at 3 locations: left, center, and right. **Use the longest** of your three measurements for cellular and honeycomb shades.

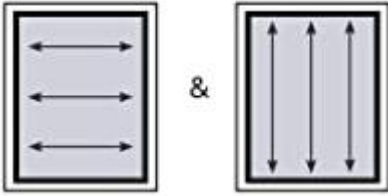

OUTSIDE MOUNT

1. Measure External Width and Height of Window Frame

Measure the outside width and height of the area that you want to cover. We recommend adding at least **4 inches to the width** of the window, and **4 inches to the height** of the window. In addition, most styles require an area **minimum of 2 1/4" flat surface above your window** of frame for mounting brackets. Outside mount cellular shades will be made to your exact measurement.

